

Wiring Instructions


Thank you for purchasing one of our electric systems, we have tried to make the system as easy as possible to wire up, but all cars are different. If you are confident with wiring you can wire it as best suits your car following the enclosed diagram, but if not confident with wiring it can be connected simply as follows:

Extinguisher to Firing Box

There is a lead that connects the firing box to the extinguisher, which has 2, 3 pin plugs on it. One end goes to the extinguisher one to the socket marked extinguisher on the firing box. If this wire is too long you can either make a coil of the excess or if you would prefer it to be neat and tidy you can shorten it by unscrewing the plug and cutting & re-soldering the wires. If you are not confident to do this return it to us at the address below and we will alter it to the length you require.

Firing Switches to Firing Box

There are 2 switches in your kit, one small internal switch which has a length of wire on it, one larger which with spade terminals and a wire with a 4 pin plug on it. The plug goes to the firing box the two wires go to the large switch. At the external (large) firing switch two red wires need to go into one spade connector and the two white wires need to go into another spade connector the connect to the switch a below.

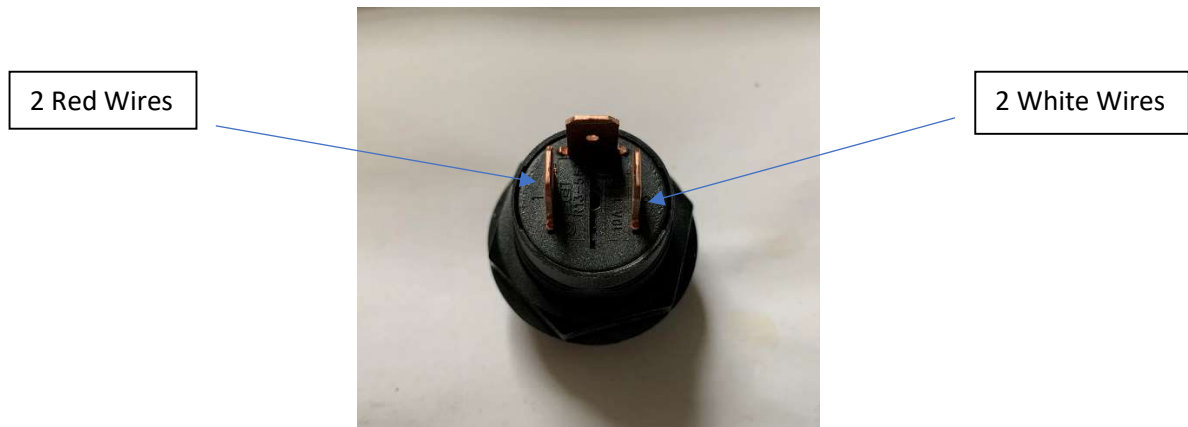

PD Extinguishers
Revidge Fold
Revidge Rd
Blackburn BB1 8DJ
01254 954954